



www.norbord.com



# Installation guide

## **Caberfix**Trade

CaberfixTrade is the traditional way to seal and fix Caberdek flooring. As such it is simple and easy to seal and fix and will provide a guaranteed waterproof seal for up to 42 days on external applications.

## Each Pack of CaberfixTrade contains:


- 2 x 1kg T & G Adhesive D3 PVA
- Enough adhesive for 50m<sup>2</sup> floor
- 6 x 33m x 45mm roll of Caberfix Tape
- · Enough tape for all joint and nail runs, as well as perimeter of 50m<sup>2</sup> floor

#### Glueing

- Prior to fixing ensure there is no standing water on the joists.
- · A liberal application of Caberfix T&G adhesive D3 PVA should be made to both the tongue and groove of the profile joint of eac panel to ensure that the entire joint is bonded. (Fig 1)
- Once the panels are butted tightly together any extruded residues should be removed with a damp cloth.
- · Panels should be glued to the joists and perimeter noggins using Caberfix T&G adhesive D3 PVA.

## **Finishing**

- When all construction and decoration work is complete and the building is weather tight, the deck should be cleaned down and the peel-off film removed by pulling slowly but firmly from the short end.
- · A sharp knife should be used around the perimeter to free any of the film which may have become snagged.

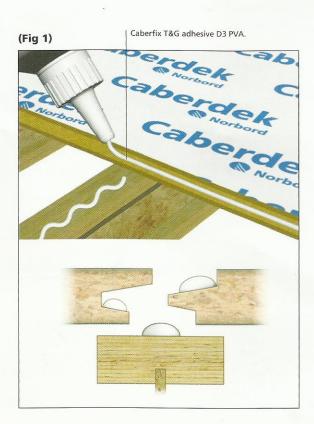



Available nationwide. Please call 01786 812 921 for stockists.